

Micro Swiss Direct Drive Extruder for Creality CR-10 / Ender 3 Printers INSTALLATION INSTRUCTIONS

Tools needed

Gather the required tools before starting installation.


- Adjustable wrench
- Phillips-Head screwdriver
- 7mm socket wrench
- 7mm spanner wrench (supplied)
- 10mm spanner wrench
- 1.5mm Allen wrench (supplied)
- 2mm Allen wrench
- 2.5mm Allen wrench
- 3mm Allen wrench



Step 1


★ For your safety, turn off and unplug your printer.

Step 2 - Remove the fan shroud

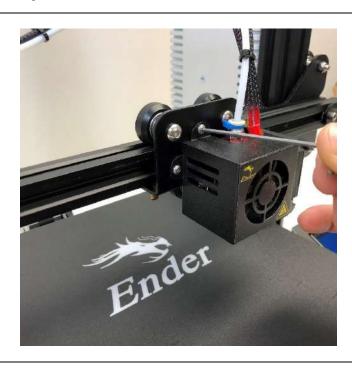


 Use the 2mm Allen wrench to remove the fan shroud

Step 3 - Remove stock hotend

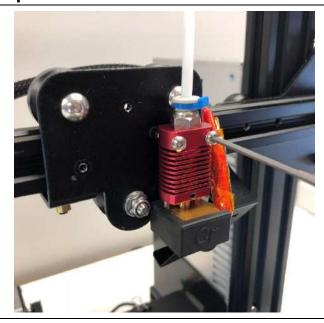

- Remove the hotend using the 2.5mm Allen wrench
- Unscrew the two screws holding the hotend to the mounting bracket
- Make sure the hotend is at room temperature!

Step 4 – Remove heater cartridge, thermistor and bowden tube

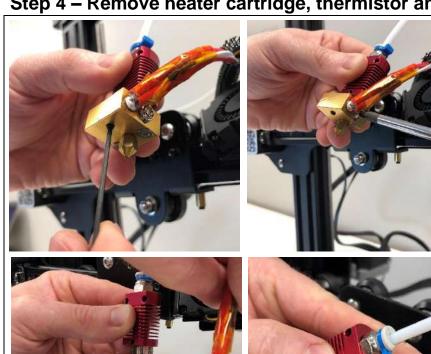

- Loosen the heater cartridge with the 1.5mm Allen wrench
- Remove the thermistor screw with the Phillips-Head screwdriver
- Carefully remove the heater cartridge and thermistor assembly
- Remove the Bowden tube

Step 5 – Remove the extruder




- Use the 2.5mm Allen wrench to remove the plastic extruder lever
- Unplug the extruder motor connector
- Use the 2mm Allen wrench to remove the extruder stepper motor

Step 6 - Remove the extruder gear



 Remove the extruder gear using the 1.5mm Allen wrench


Step 7 – Remove the belt

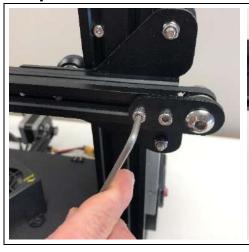



- Loosen the belt with the 3mm Allen wrench
- Unclip the belt

Step 8 - Remove cartridge plate

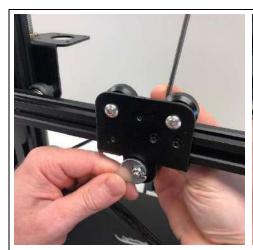




- Unscrew the lower roller wheel. Hold one side with the 3mm Allen wrench and unscrew the nut with the 8mm spanner
- Remove the cartridge plate
- Remove the other two roller wheels

Step 9 – Begin installing Micro Swiss extruder




- Insert the provided 5mm nylon patched screw into the roller wheel. At this point, only install the top two rollers.
 - Be sure to use provided nylon patched screws!
- As you install those rollers, keep tightening the screws until the wobble disappears, but the rollers are still free spinning
- Insert the unpatched 5mm screw into the third roller
- Insert the eccentric nut
 Note the correct orientation the
 longer boss facing away from the
 roller

Step 10 – Installing Micro Swiss aluminum cartridge on the rail

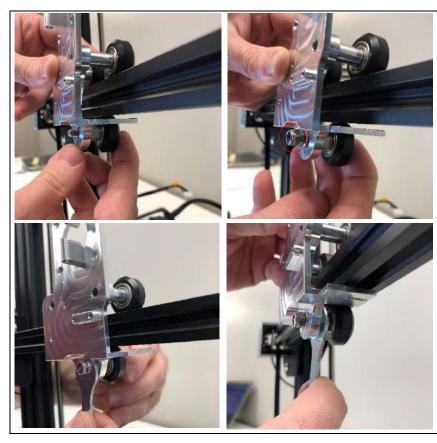

- Install the new Micro Swiss aluminum cartridge on the rail
- Make sure you are using a nylon lock nut
- Tighten the nut. Make sure the roller is still free spinning
- Adjust the eccentric nut to remove any cartridge wobble

Step 11 – Reinstall the belt

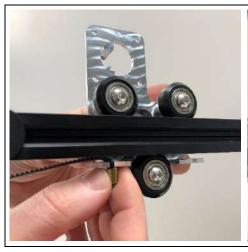



- Reinstall the belt
- Tighten the belt

Step 12 – Install extruder motor





- Install the extruder motor on the aluminum cartridge
- Use the provided M3 screws Make sure the motor connector is facing upwards.

Step 13 – Install the lever






- Insert the precision shoulder screw into the lever
- Install the lever. Use the 2mm Allen wrench

Step 14 – Install the drive gear




- Install the drive gear on the extruder motor. Note the correct orientation set screw sides faces the motor.
- Engage the lever and insert a piece of filament, preferably rigid PLA. Use back and forth motion to align the center line of lever and drive gear
- Once aligned, keep applying pressure to the lever and tighten the grub screw
- Double check to see if the gears are centered

Step 15 - Install the lever pin

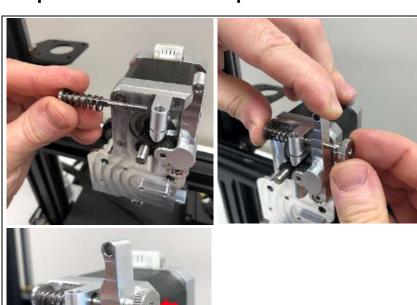


 Screw in the lever adjusting knob until the pin is flush with the knob.
 This should be a good starting point for the filament grip

Step 16 - Assembling the hotend

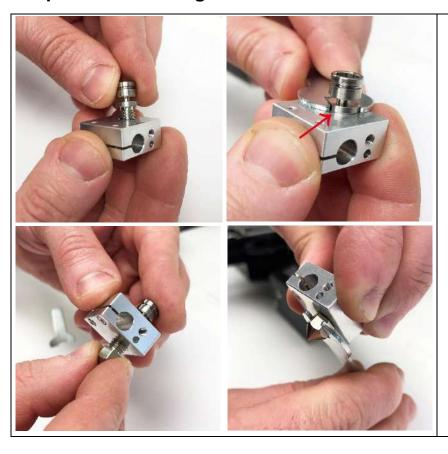


- Start by screwing in and tightening the titanium thermal break. Make sure it is flush with the heater block.
- Install the nozzle

Step 17 - Assembling the hotend

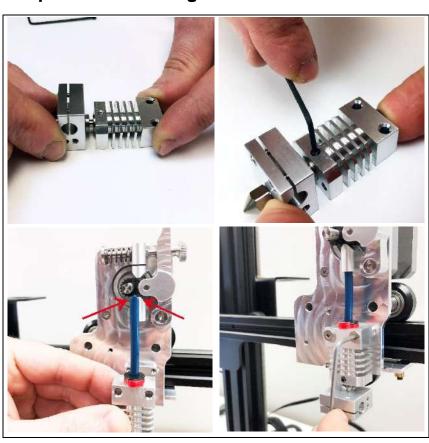

- Insert the heater block assembly into the cooling block and tighten the grub screw
- Insert the provided PTFE liner. Make sure the beveled edge is facing up
- Install the hotend assembly on the extruder plate. The beveled end of the tube should align with the extruder gear, to provide duly constrained filament path

Step 18 - Reinstall the heater cartridge and thermistor

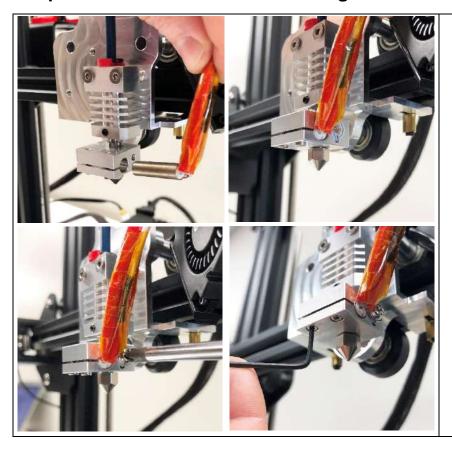

- Reinstall the heater cartridge and thermistor
- Tighten the heater cartridge using the 1.5mm Allen wrench
- Secure the thermistor. Be careful not to overtighten the screw as this can damage delicate wires

Step 19 - Fully seat the nozzle




- Turn on the printer and preheat the hotend to 220 degrees Celsius
 - ⚠ The hotend is now at 220 degrees Celsius. Be extremely careful not to burn your fingers when tightening the nozzle and the grub screws
- Hold the heater block with the adjustable wrench and use the 7mm socket wrench to tighten the nozzle
- The heater cartridge might become loose after initial heat up. Make sure it is fully tightened. Be careful not to burn your fingers!
- Tighten the grub screws on the cooling block. Again, be careful not to burn your fingers!


Step 20 – Cool down your printer



- Cool down your printer and shut it off
- Make sure the printer is fully cooled down. Turn off and unplug your printer before finishing installation

Step 21 - Reinstall the fan

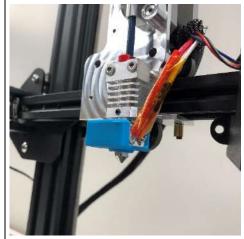

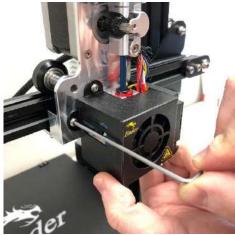

- Install the silicone sock
- Reinstall the cooling fan shroud


Step 22 – Install the filament guide bracket






 Install the filament guide bracket using provided M3 bolts and nuts


Step 23 - Install the filament guide tube

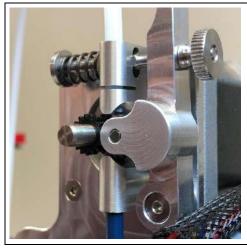

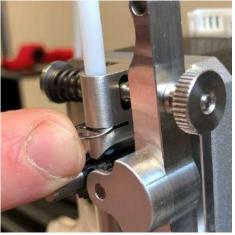

 Insert the filament guide tube and secure it with the provided retaining clip

Step 24 - Connect the motor

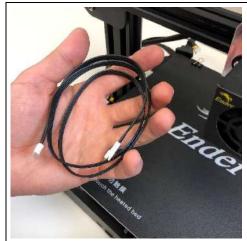



 Connect the extruder motor with the provided custom extension cord

Step 25 – Finishing the installation





 Secure the cables and filament guide tube with zip ties

Extruder steps/mm needs to be calibrated. Good starting point is 130 steps/mm

The installation is now complete!

